


IRROMETER®

1425 PALMYRITA AVE

RIVERSIDE, CA 92507

P: 951.682.9505

E: TECHSUPPORT@IRROMETER.COM

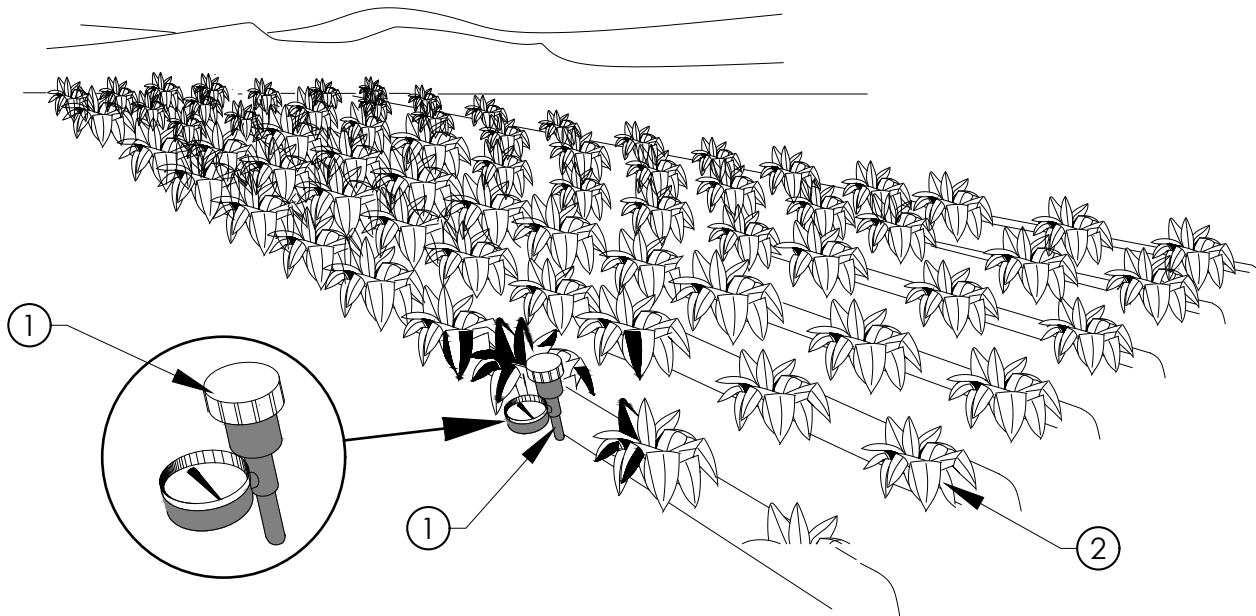

① IRROMETER TENSIO METER

② FARMED ROW CROP.

NOTES:

- INSTALL IRROMETERS 3 OR 4 PLANTS IN FROM THE ROAD TO AVOID TRAFFIC DAMAGES.
- INSTALL INSTRUMENTS IN THE ACTIVE ROOT ZONE IN THE CROP ROW.
- ON LARGER IRRIGATION BLOCKS, A MONITORING LOCATION EVERY 15 - 20 ACRE IS RECOMMENDED.
- USE SHORT (SHALLOW) AND LONG (DEEPER) IRROMETERS ON 18" OR DEEPER ROOT SYSTEMS.
- IRROMETER PLACEMENT IS A FUNCTION OF CROP ROOT DEPTH.

NO SCALE

IRROMETER INSTALLATION - ROW CROPS