


Watermark Installation detail - Vines on Jets or Microsprinklers

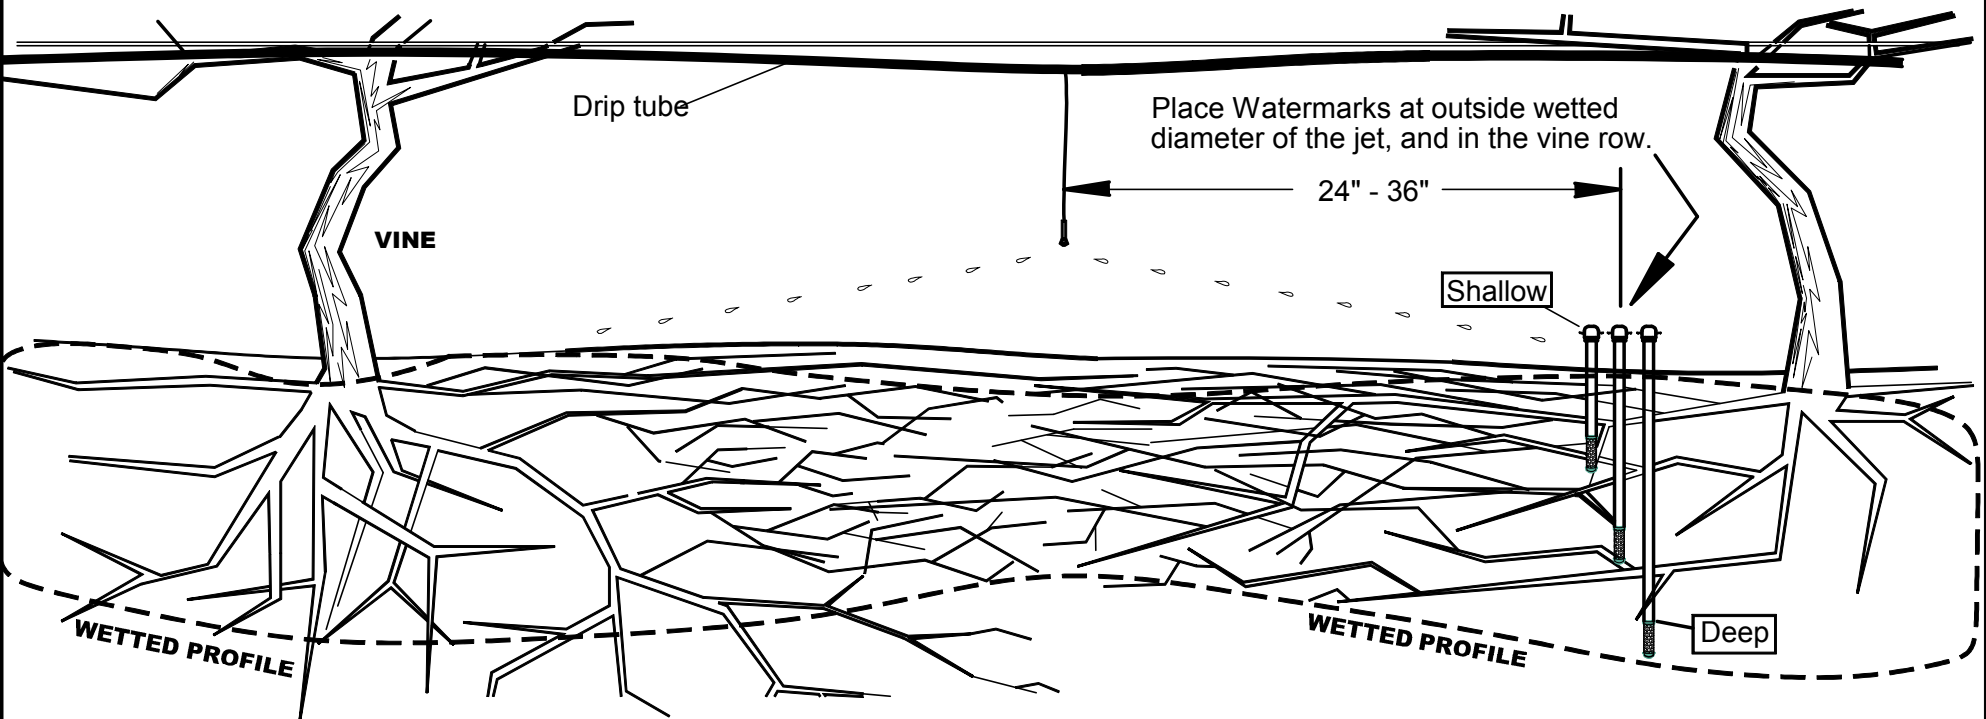

NOTE: Wetted profile could differ from that shown above depending on soil types.

1. Install Watermarks 3 or 4 vines in from the road to avoid traffic damage.
2. Install instruments in the active root zone in the vine row..
3. On larger irrigation blocks, a monitoring location every 15 to 20 acres is recommended.
4. Use short (shallow) and long (deeper) Watermark sensors on 18" or deeper root systems.

NOTE: Watermark placement depth is a function of crop root depth.