


1425 PALMYRITA AVE RIVERSIDE, CA 92507 P: 951.682.9505 E: TECHSUPPORT@IRROMETER.COM

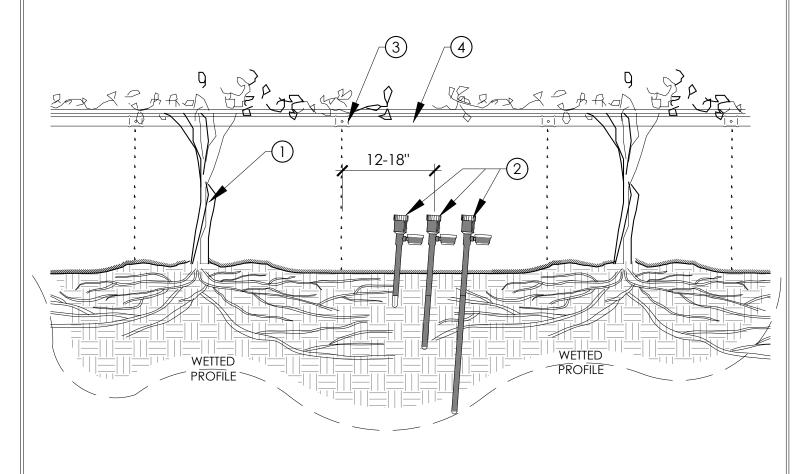

1) EXISTING VINES

- (3) DRIP EMITTER
- (2) IRROMETER TENSIOMETER
- (4) DRIP TUBE

NOTES:

- INSTALL IRROMETERS 3 OR 4 VINES IN FROM THE ROAD TO AVOID TRAFFIC DAMAGES.
- INSTALL INSTRUMENTS IN THE ACTIVE ROOT ZONE IN THE VINE ROW.
- ON LARGER IRRIGATION BLOCKS, A MONITORING LOCATION EVERY 15 20 ACRE IS RECOMMENDED.
- USE SHORT (SHALLOW) AND LONG (DEEPER) IRROMETERS ON 18" OR DEEPER ROOT SYSTEMS.
- IRROMETER PLACEMENT IS A FUNCTION OF CROP ROOT DEPTH.

NO SCALE

IRROMETER INSTALLATION - VINES ON DRIP