


Watermark installation detail - Row Crops

NOTE: Watermark placement depth is a function of crop root depth.

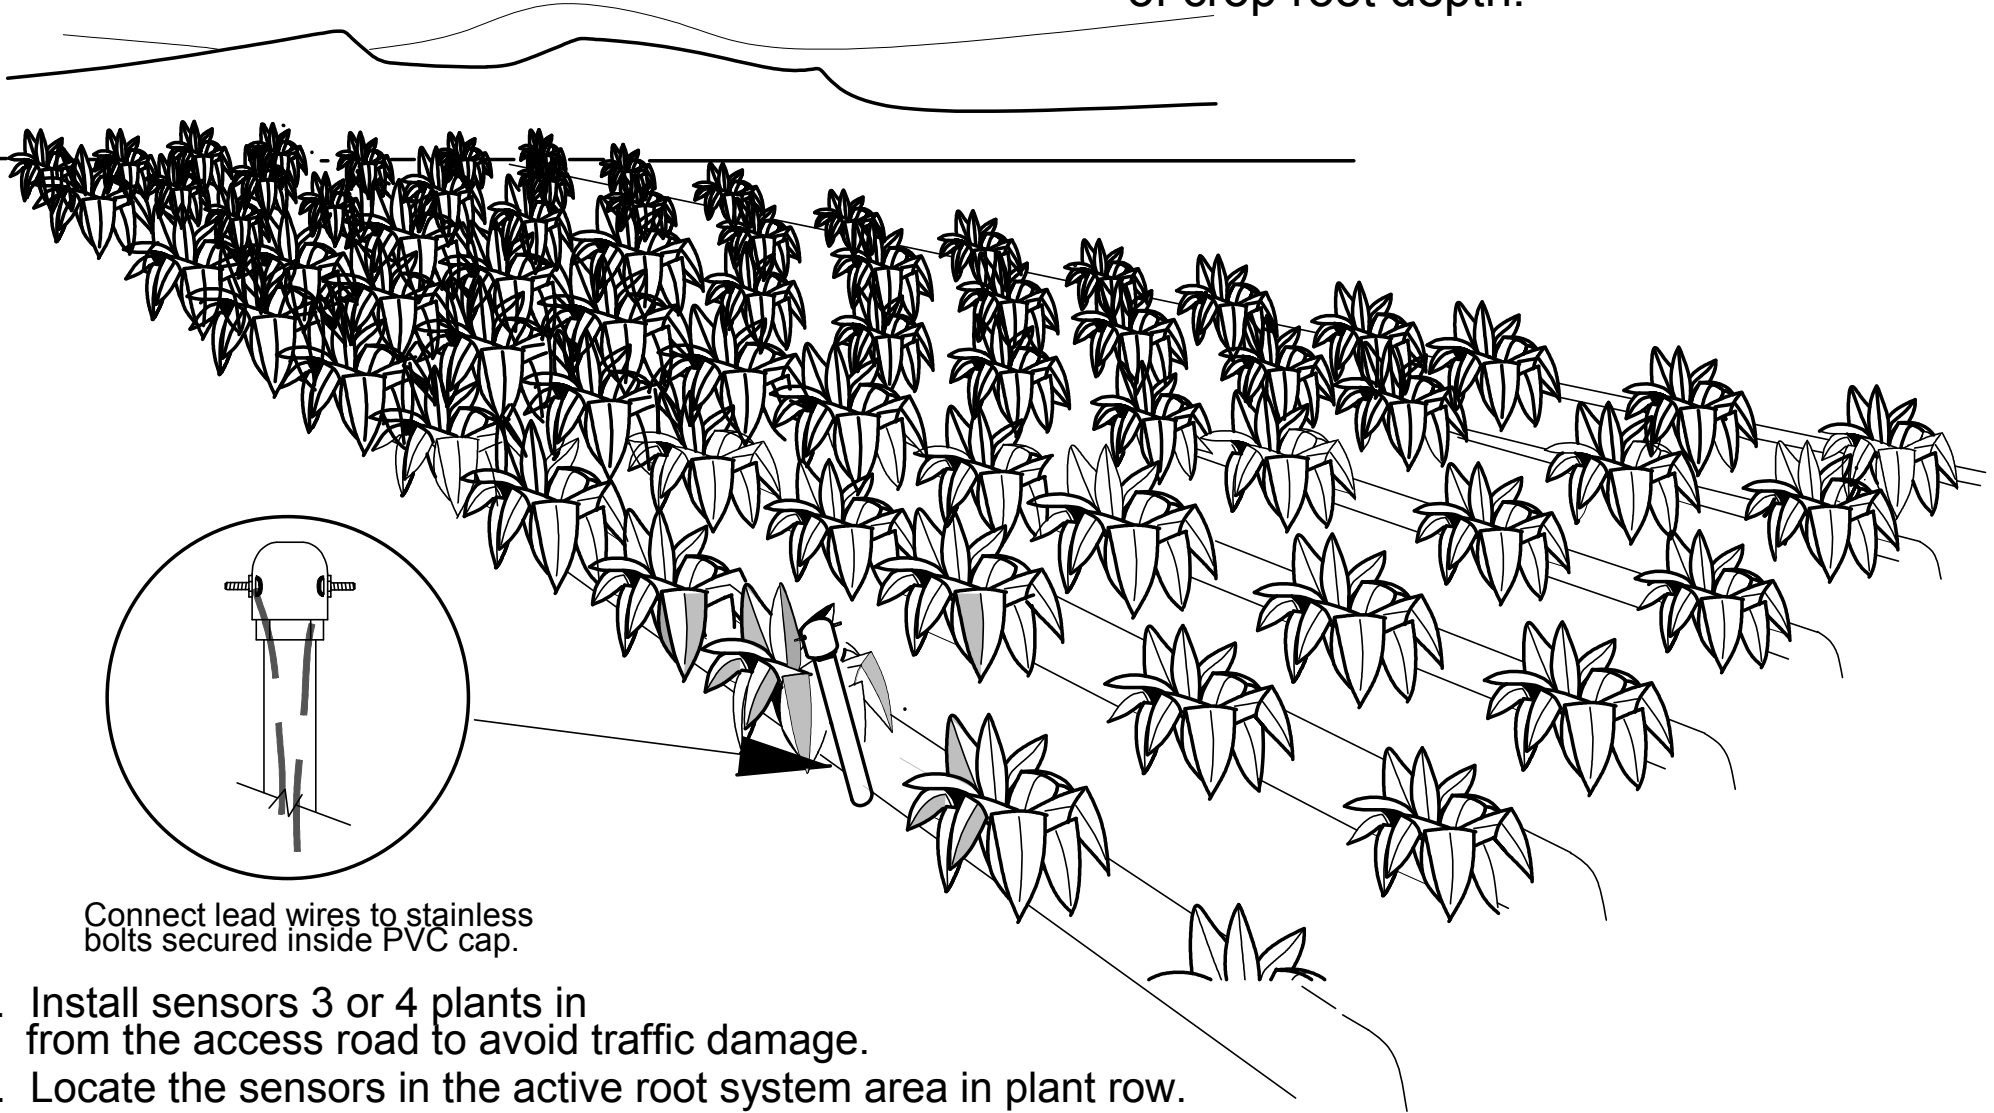

Connect lead wires to stainless bolts secured inside PVC cap.

1. Install sensors 3 or 4 plants in from the access road to avoid traffic damage.
2. Locate the sensors in the active root system area in plant row.
3. On larger irrigation blocks, a monitoring location every 15 to 20 acres is recommended.
4. In deeper rooting crops, two or more sensors per location set at shallow and then progressively deeper steps are advised for more accurate monitoring of moisture profile.