


IRROMETER®

1425 PALMYRITA AVE

RIVERSIDE, CA 92507

P: 951.682.9505

E: TECHSUPPORT@IRROMETER.COM

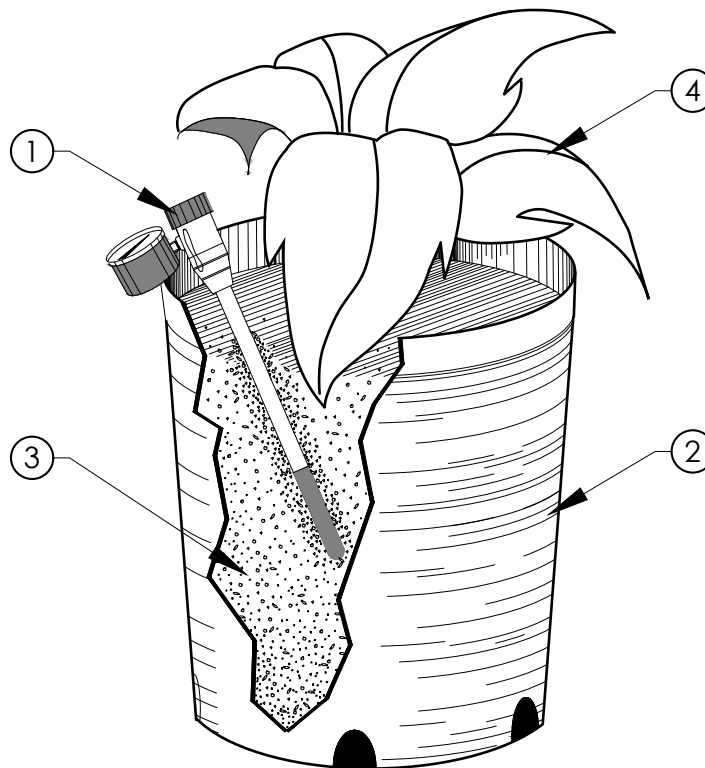

① IRROMETER MODEL MLT TENSIOMETER

② NURSERY CONTAINER

③ PLANTING MEDIUM.

④ NURSERY STOCK PLANT MATERIAL.

NOTES:

- PLACE TIP IN ROOT MASS AREA, USUALLY HALFWAY DOWN THE POT.
- ANGLE WITH GAUGE DOWNWARD AND RESTING ON CONTAINER EDGE FOR SUPPORT.
- SELECT CONTAINER IN DRIER AREA OF BENCH.
- "FLAG" CONTAINER BEING MONITORED FOR EASY IDENTIFICATION.

MLT IN CONTAINER

NO SCALE